ELECTRIC SCREEN ACCESSORIES

Key-Locking Switch Cover Plate



- · Hinged, goes over cover plate.
- Opens with a key to allow access to 110 volt switch or L.V.C. threebutton wall switch.
- · Brushed stainless steel finish.

Key-Operated, 110 volt Switch

- Flushed-mounted wall control switch is key-activated for security.
- · Use with 110 volt systems only.
- Ivory cover plate.





- DC controls allowing screen to be raised or lowered automatically when projector is ON or OFF. Two models to choose from: 12 volt or 5 volt.
- Includes complete box with ivory rocker switch for manual operation and cover plate.
- Projector must have a 12 volt or 5 volt lead to operate the interface.

Wireless Remote for Horizon

Radio Frequency •Remote •Infrared Remote



Replacement Wall Switches 110 volt

IvoryWhite



Floating Mounting Bracket for Cosmopolitan and Tensioned Cosmopolitan



Allows screen to be mounted onto wall or ceiling and aligned left to right. •White •Black

Laser Pointers

The ultimate in presentation convenience. Select from three models. •Laser Pointer

•Blinking Mode Laser Pointer •Jumbo Laser Pointer

