


## MU-50PZ41B INPUT/OUTPUT JACK DIAGRAM

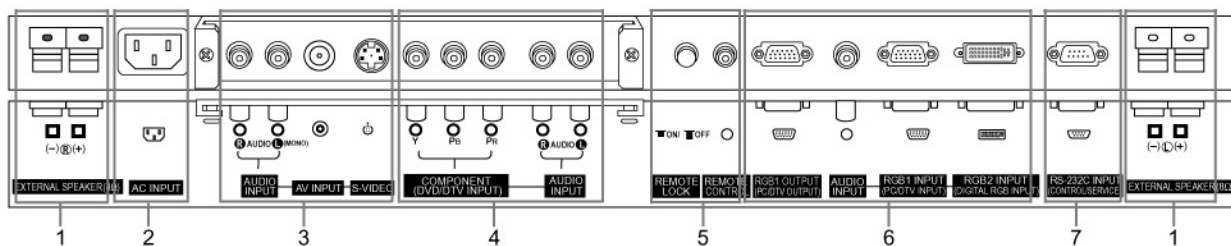

1. **EXTERNAL SPEAKER (8 ohm output)**  
Connect this terminal to the optionally available speaker.
2. **POWER INPUT SOCKET**  
This Monitor operates on an AC mains supply, the voltage is as indicated as inside back cover of this manual. Never apply DC power to the Monitor.
3. **AUDIO/VIDEO IN SOCKETS**  
Connect the audio/video out sockets of external equipment to these sockets.  
**S-VIDEO/AUDIO IN SOCKETS (S-VIDEO)**  
Connect the video out socket of an S-VIDEO VCR to the S-VIDEO socket.
4. **COMPONENT(DVD/DTV INPUT)/AUDIO INPUT SOCKETS**
5. **CONTROL LOCK  
REMOTE CONTROL**  
When "CONTROL LOCK" is set "ON", wired remote control mode is operated.
6. **RGB1 OUTPUT(PC/DTV INPUT)/AUDIO IN SOCKETS  
RGB1 INPUT(PC/DTV INPUT)/RGB2 INPUT(DIGITAL  
RGB INPUT) IN SOCKETS**
7. **RS-232C INPUT(CONTROL/SERVICE) IN SOCKET**  
Connect ti to the RS-232C socket on the PC.